





Kia Stonic
SUV, 5 door
From November 2025

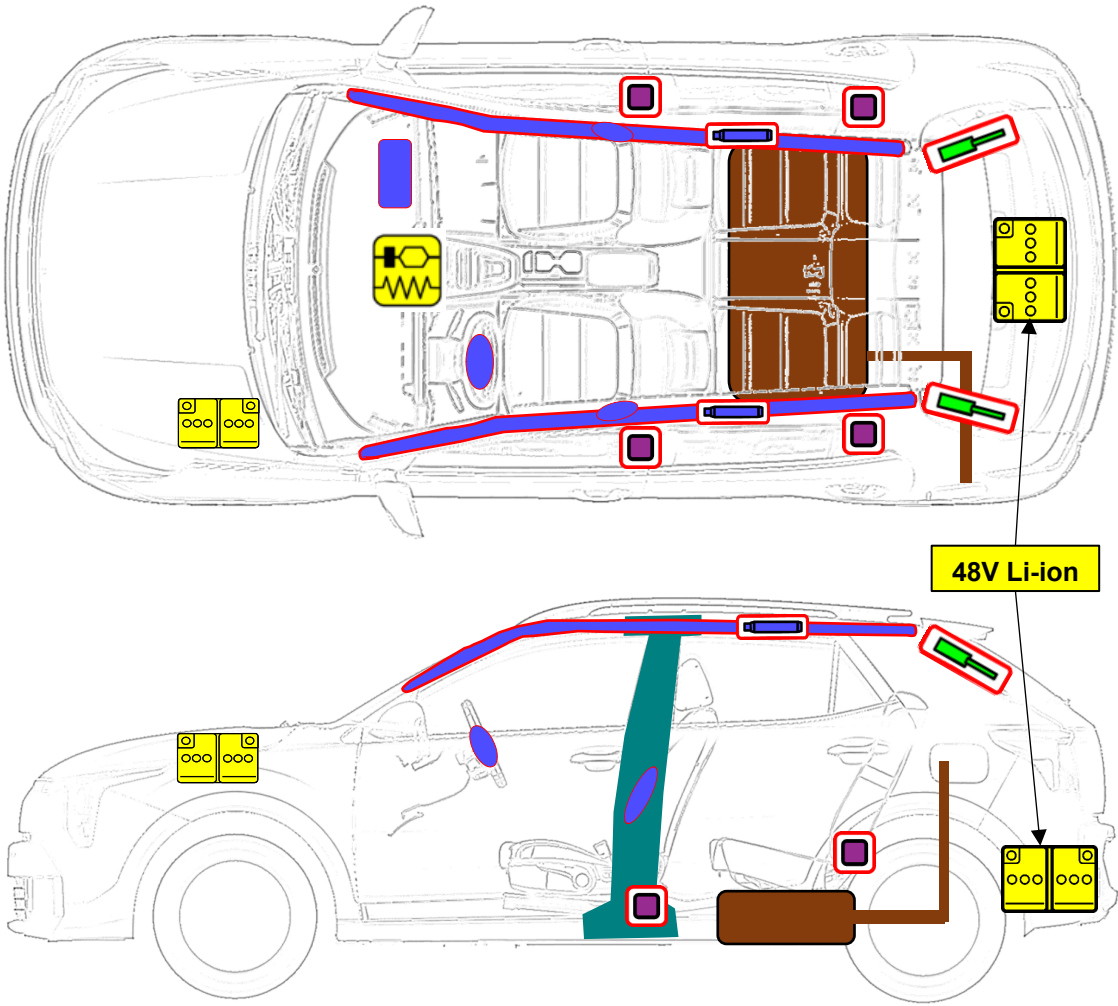

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Gas strut / Preloaded spring		High strength zone		Battery low-voltage		Fuel tank

1. Identification / recognition

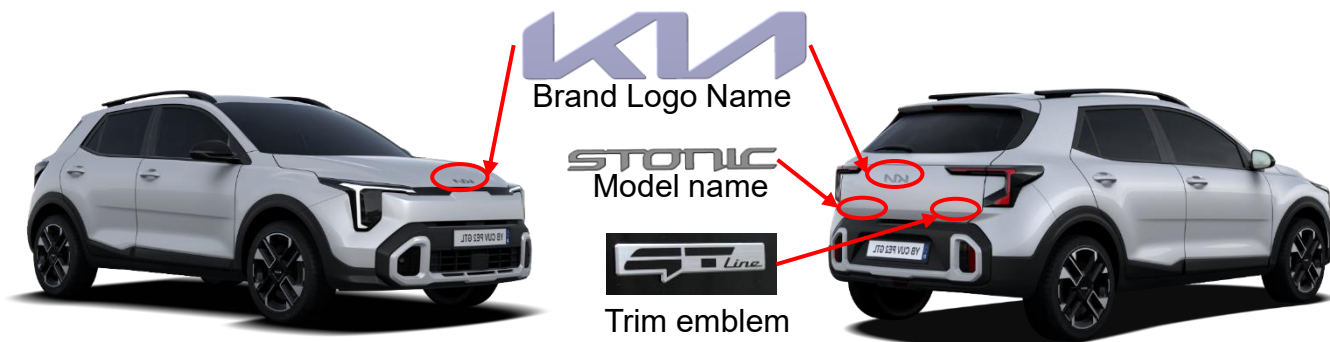

2. Immobilisation / stabilisation / lifting

Immobilization:

1



To engage the parking brake, first apply the foot brake and then pull up the parking brake lever as far as possible.


For DCT transmission vehicles, shift into park (P) gear.

2




To apply the EPB* (if equipped), depress the brake pedal and pull up the EPB switch.

* Electronic Parking Brake

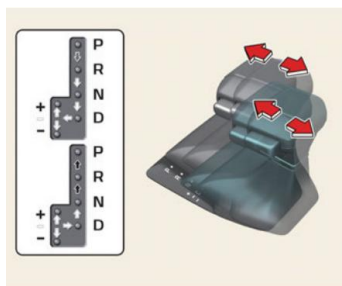

3 Lifting points under the vehicle:

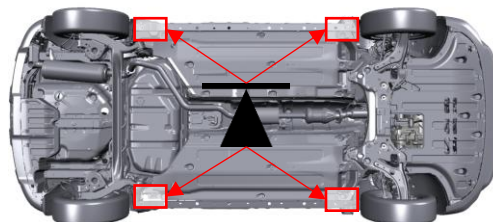


3. Disable direct hazards / safety regulations

Low Voltage 12V battery:



Access:

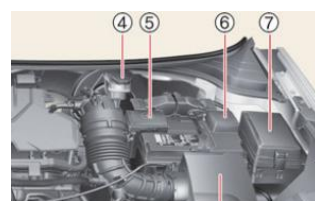

1. Pull the release lever to unlatch the hood. The hood should pop open slightly.

2. Raise the hood slightly, push the secondary hood release lever (1) inside the hood center and lift the hood (2).

Disabling:

Turn the ignition switch off



Access to battery shown above



Disconnect the negative(-) terminal (5)



Disconnect the positive(+) terminal (6)


48V Battery (if equipped) :



Access: 



Open the tailgate.

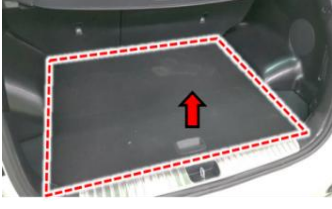


Remove the luggage board




Disabling:

- ① Wait about 10 minutes after turning off the engine.
- ② Disconnect the (-) terminal from 12V battery in the hood. (Shown on page 2)
- ③ Disconnect the 12V (+) cable from the 48V battery pack.
- ④ Disconnect the 48V (-) cable and (+) cable in order.
- ⑤ Disconnect the BMS EXTN wire.

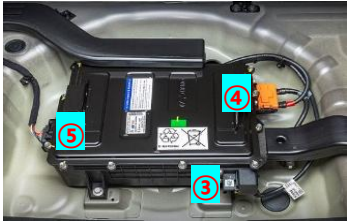


4. Access to the occupants

Steering column adjustment:

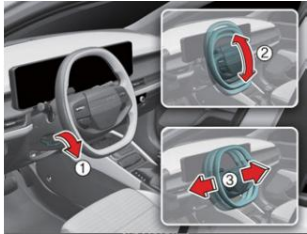

Seat adjustment:

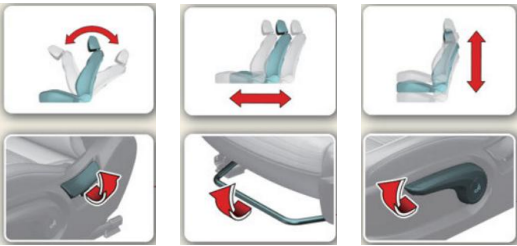

* If equipped

Glass:




Tailgate:





①	Laminated
②,③,④	Tempered

Vehicle body

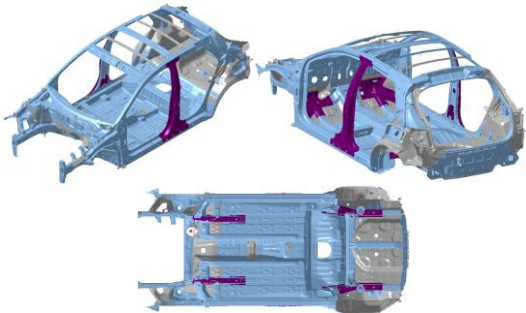


  5. Stored energy / liquids / gases / solids

	  	45l	
	   	12V	R-1234yf 450g R-134a 450g
 Li-ion	     	48V	 



 
WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA




6. In case of fire



Use large amount of water

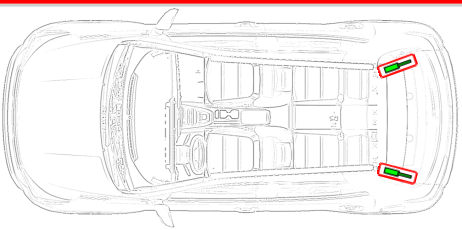

BATTERY RE-IGNITION!

 

Gas strut!



Risk of missile effect of hood and tailgate.

7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.



8. Towing / transportation / storage

OK

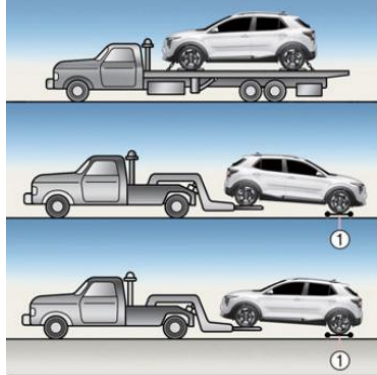


Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK



Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle (2).

Towing - Hook

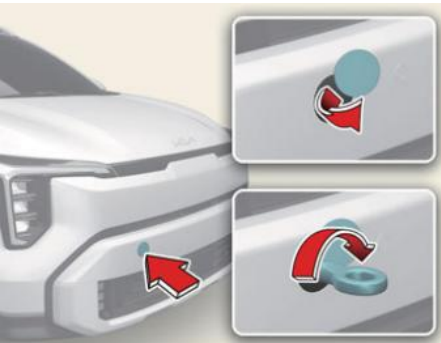

The towing hook is located in the tool case in the trunk

10. Explanation of pictograms used

	Gasoline vehicle		Fuel tank content gasoline/ethanol		Bonnet
	General warning sign		Air-conditioning component		Boot
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		Warning, Electricity