



360V Li-ion battery

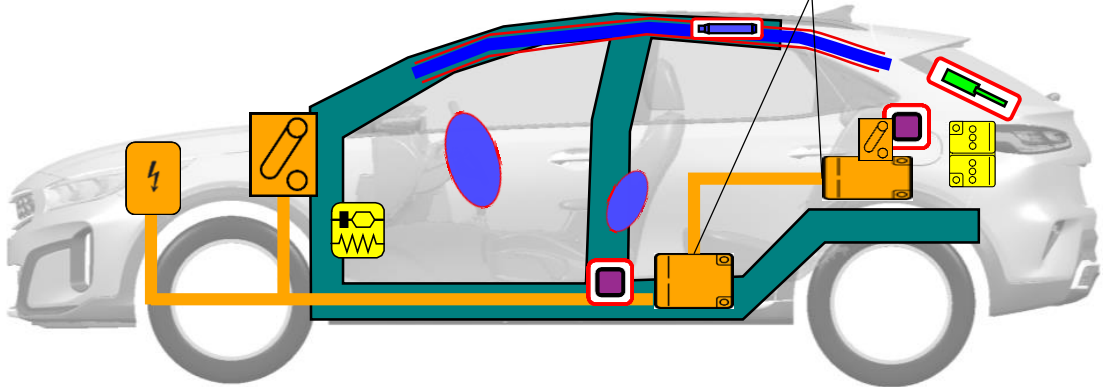


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Preloaded spring / Gas strut		High strength zone		Zone requiring special attention		High voltage component
	Battery low-voltage		Ultra-capacitor, low voltage		Fuel tank		Gas tank		Safety value
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra capacitor

1. Identification / recognition

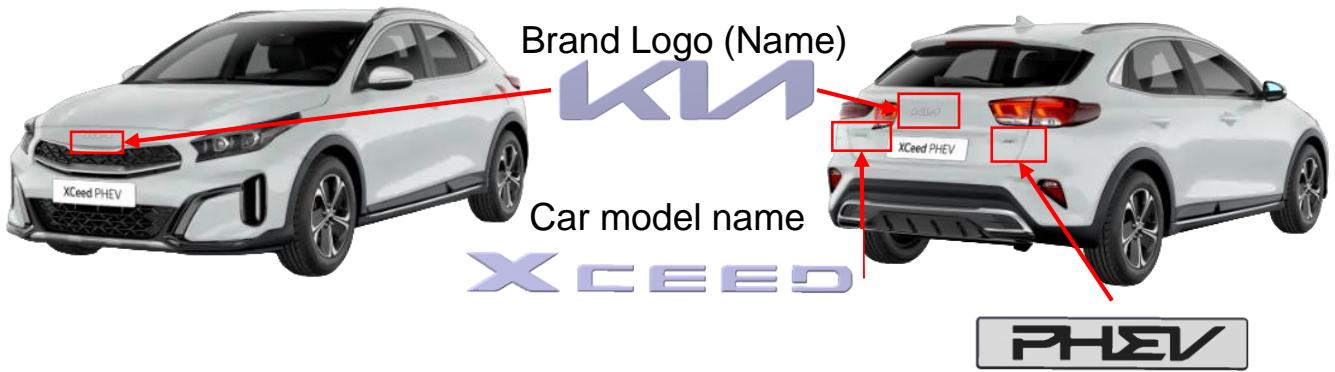

2. Immobilisation / stabilisation / lifting



■ Immobilisation

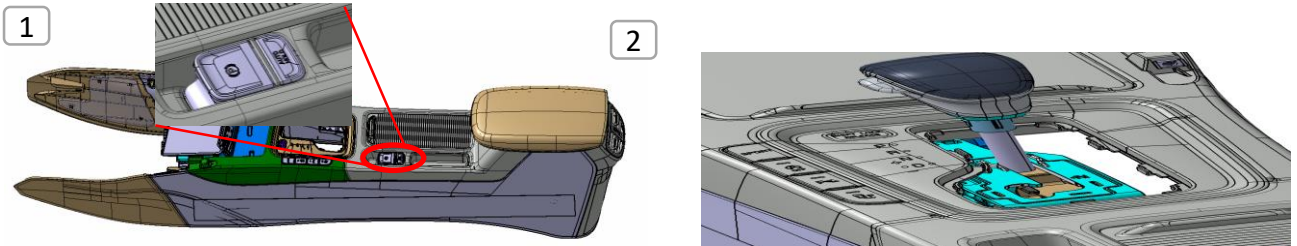

1. Chock the wheels and pull the switch to set the parking brake.

2. For automatic transmission vehicles, shift into park(P) gear.


■ Lifting points under the vehicle: ■ ▲

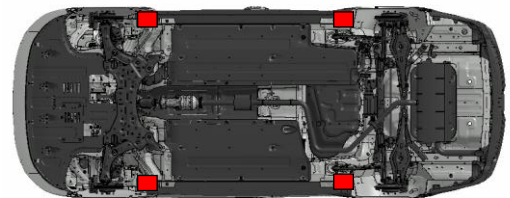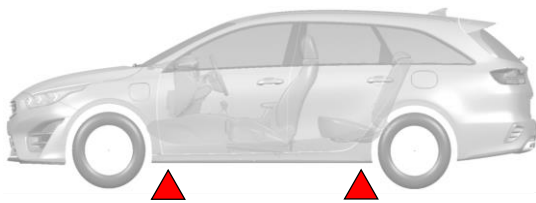


3. Disable direct hazards / safety regulations

⚠ IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW ⚠


■ Access to the battery (Low voltage / High voltage)

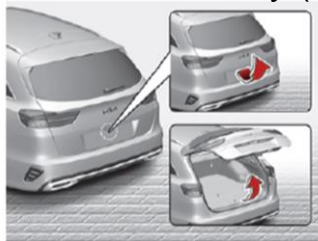

Unlock the tailgate with the smart key or the central lock button. Press the switch and pulling it up.

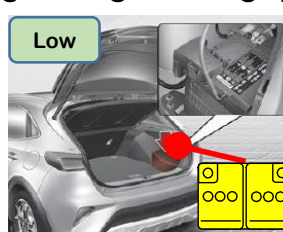


Low voltage battery is in the luggage

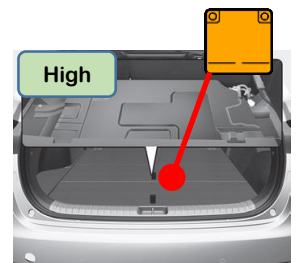

High voltage battery is under the luggage board

■ Disabling procedure


- High voltage battery (360V)

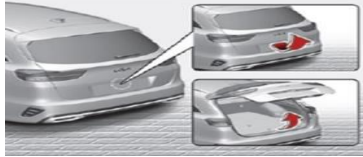

1. Unlock the tailgate



2. Raise luggage tray after raising the luggage board.

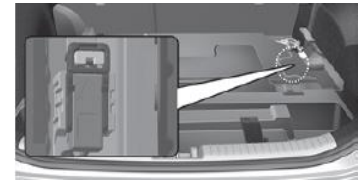

3. Pull up the yellow lever in the high voltage cut-off switch.

- Low voltage battery (12 V)



1. Turn the ignition switch off




2. Disconnect the negative(-) terminal




3. Disconnect the positive(+) terminal

4. Access to the occupants

■ Steering column adjustment

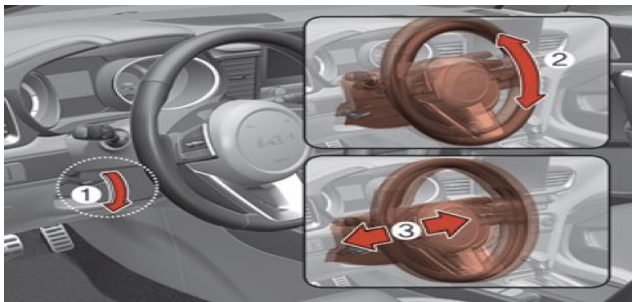

■ Seat adjustment

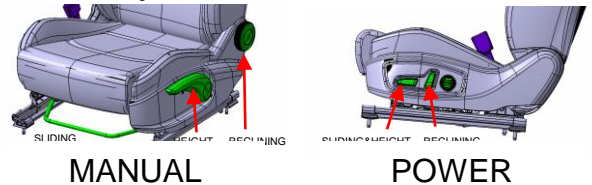


MANUAL


POWER

■ Vehicle Body

- Hardened Steel(100K↑)

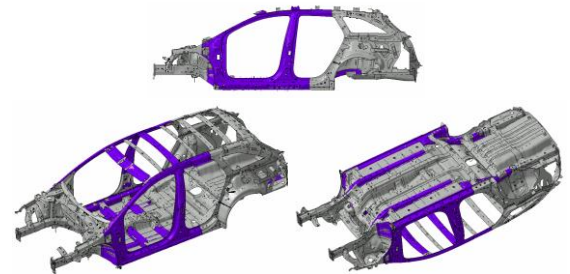

■ Glass

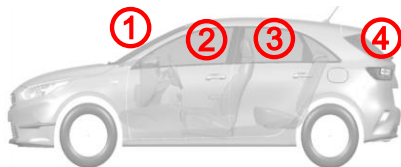


1 : Laminated
2 : Tempered
3 : Tempered
4 : Tempered

5. Stored energy / liquids / gases / solids

		max. 37L
		12 V
LI ION		360 V



 
When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



6. In case of fire




 Use large amount of water



BATTERY RE-IGNITION!

■ Gas Strut

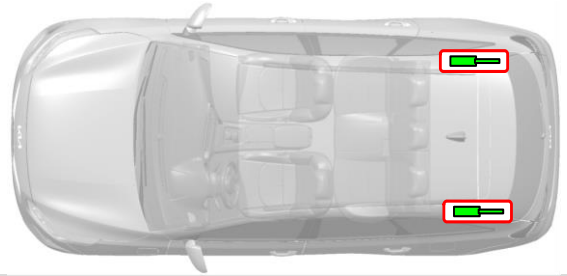

- Risk of missile effect of hood and tailgate.

 
 
7. In case of submersion



Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / transportation / storage

OK :



Dolly



Dolly

Notice: The use of wheel dollies or flatbed is recommended. It is acceptable to tow the vehicle with the rear wheel on the ground (without dollies) and the front wheels off the ground.

Not OK :



Notice : Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment. Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle.

10. Explanation of pictograms used

	Gasoline vehicle		
	General warning sign		Warning, Electricity
	Corrosives		Flammable
	Explosive		Hazardous to the human health
	Use thermal Infrared camera		Acute toxicity
	Bonnet		Use water to extinguish the fire